



Imagination

Adjustable Bed Systems

By

Classic Sleep Products, Inc.

Owner's Manual

SERIAL NUMBER: _____

Your Dealer and Classic Sleep Products wish to thank you for purchasing this product. It has been engineered to provide years of comfort and satisfaction to you. Like any product using electrical-mechanical components, care must be taken to insure user safety and complete product satisfaction.

Precautions and Safety Instructions

For your Safety, please read thoroughly before using this product.

➤ **Grounding Instructions**

This product utilizes a polarized plug to reduce the risk of electric shock. The plug is designed to fit only one way into a grounded outlet. In the event your wall outlet does not accommodate the plug, you are advised to contact a qualified electrician to have a grounded outlet installed. Not using a grounded electrical system could create a hazard for electrical shock, electrical fire, or malfunctioning in the operation of this product.

➤ **Surge Protection**

The use of a surge protector is highly recommended. By plugging your bed into a surge protector, you are preventing electrical problems resulting from sudden power surges in your home's electric system (surge protectors are not supplied with your bed; however they are readily available at most home improvement and hardware stores for a nominal cost).

➤ **Non-Medical Use Disclaimer**

This bed is not designed for hospital and/or nursing home use and does not meet institutional standards of construction and operation. **Do not use this bed with tent type oxygen therapy equipment or in the presence of any flammable or explosive gases.**

➤ **Warranty Precaution**

The warranty covering your system will be voided if you or any unauthorized person tampers with or opens any of the motor housings or the remote control handset. Any replacement or repair of the electrical components must be performed by an authorized person only. The bed is designed to require no maintenance on the part of the consumer. Do not alter, adjust or in any way change the structure of the product as this will void your warranty

➤ **Legs with Glide Bases**

The Imagination is equipped with glide bases all four legs. . It is suggested that if the bed is to be moved, that the weight of the mattress be removed as the glides are designed to resist sliding, and are particularly hard to move on carpet. It is recommended that several people pick up the frame enough to take most of the weight off of the legs. The other aid to moving your bed would be “Furniture Movers” or some similar product where a plate is placed under each of the four legs.

➤ **Warning for small children and pets**

After the bed is removed from the box, dispose of all packing materials at once as small children and pets can smother in the plastic packing. Small children should not be allowed to operate or play on the bed. More importantly, make certain that no one, particularly children and pets be allowed to enter the space under the bed. This area contains moving parts when the bed is being articulated and could cause serious or even fatal injuries.


➤ **Operating Standards**

The lift drives on the Imagination adjustable bed base are designed for intermittent duty on a “2/18” cycle basis. This means that after 2 minutes of continuous activation, the drive motors must be off for 18 minutes. Naturally if the motors are activated for times less than 2 minutes, the time between periods of activation and down time are correspondingly shortened. For example, if you run either lift motor for about 15 seconds, this is 1/8th of 2 minutes, so the non active interval will be 1/8th of 18 minutes, or a little over 2 minutes. If this rating is exceeded, it could adversely affect the longevity and continued flawless performance of the system. Such disregard of the design limits could void your warranty.

There are of certain weight restrictions that must be observed in utilizing this product. We recommend that the combined weight of the mattress and the occupant(s) be limited to the following: Twin: & Twin XL, Split Queens and Split Western Kings: 300 Lbs. per piece, Doubles and Queens: 425 Lbs. **Do not sit or in any way place your full body weight on the head or foot end while it is elevated.** Doing so may damage the structure of your bed and will void your warranty. It is recommended that occupants enter and exit the bed in its full down position.

ASSEMBLY INSTRUCTIONS

- A. After you have removed the lid of the two piece carton, carefully pull back the wrapping. Remove the plastic bags containing the parts you will need to assemble your Imagination Adjustable Bed. The components are four(4) threaded legs with glide bases; two (2) Headboard Extender Brackets with hardware; two (2) Headboard Mounting Brackets with hardware; one (1) Wired Remote Control Handset; One (1) Mattress Retainer Bar. These are shown in the photographs below.

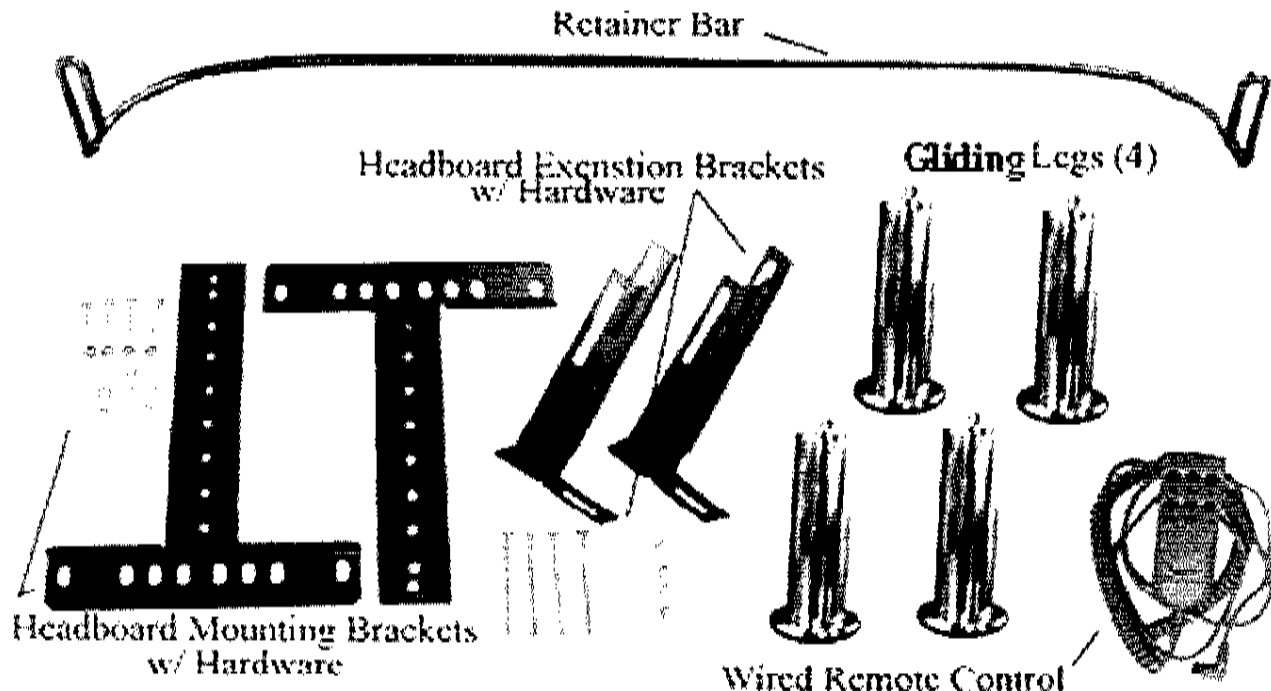

- B. Insert the threaded end of the legs into the threaded holes at the four corners of the base frame. Hand tighten each leg as tight as possible Do not use tools as you could scratch the chrome surface. Then, using a flat head screwdriver in the slotted bolt on the bottom of the glide base tighten each leg to the frame
- If you are NOT going to use a headboard on this bed, you may skip to “D”
First attach the Headboard Extender Brackets to the head end of the frame as shown in Figure A below. Before final tightening, make certain that the end of the Extender Bracket is at least 1 ½ inches beyond the outer surface of the foam wall (See Figure B). This is very IMPORTANT as less than 1 ½ inch of space may cause the Headboard Bracket to contact the foam base and damage the foam and the cover. Next attach the “T” shaped Headboard Mounting Brackets to the Extenders as shown in the photo. If you are setting up two twin units for a king size bed, you should only install the outer Mounting Brackets on each twin base unit. Measure the distance between the

mounting holes or slots on the headboard, and set the Headboard Mounting Brackets to align with those dimensions. Tighten all hardware.

Figure A



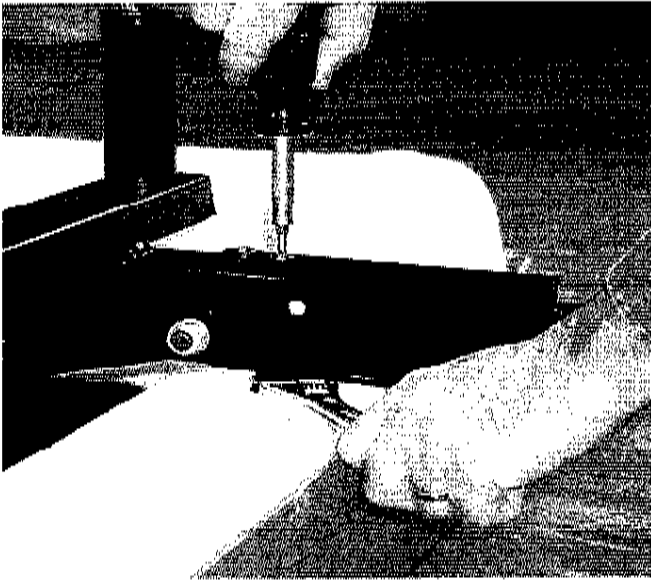


Figure B

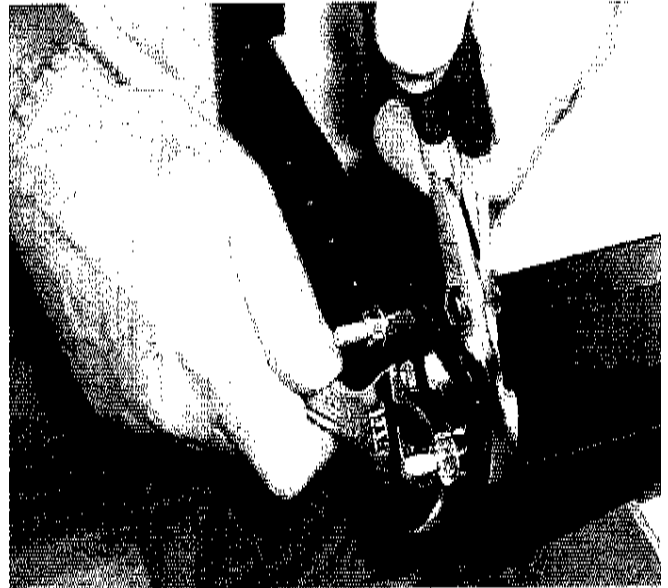


- **D. Connect a 9 Volt Battery to the snap-on terminal clips and securely place it into the compartment (as shown in Figure C). This is the power for “Emergency Power Down”, its function will be explained further in the Instructions for Use. A Double or Queen unit will require two 9 volt batteries, and all other sizes require only one**

Figure C

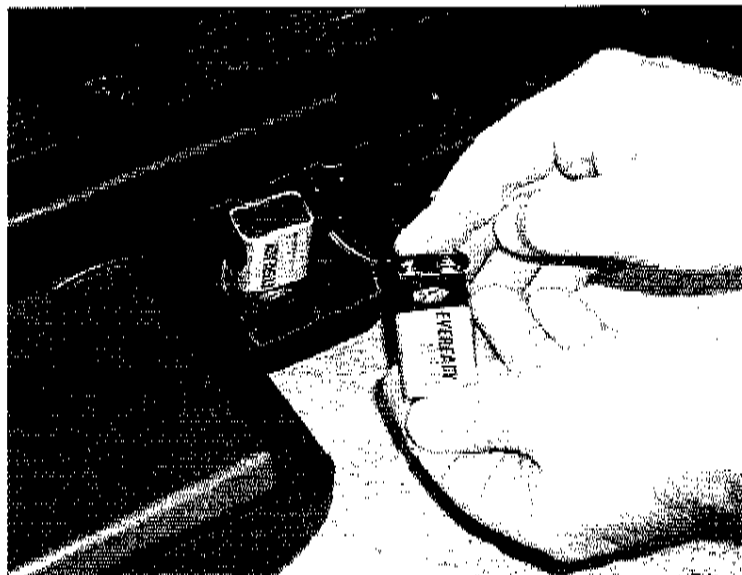

- E. Feed the wired remote control handset out on the side of the bed where it will be used. There is a wire clip on each side which will allow you to press the control wire into the clip to hold it securely (See Figure D). Please be sure to secure the wire on either side where the control will be used. *This very IMPORTANT, double check that the power cord and the cord to the Remote Control are clear of all moving parts and will not rub or pinch.* The wires have been fastened at the factory to eliminate this possibility – do not remove the holding clamps.

Figure D

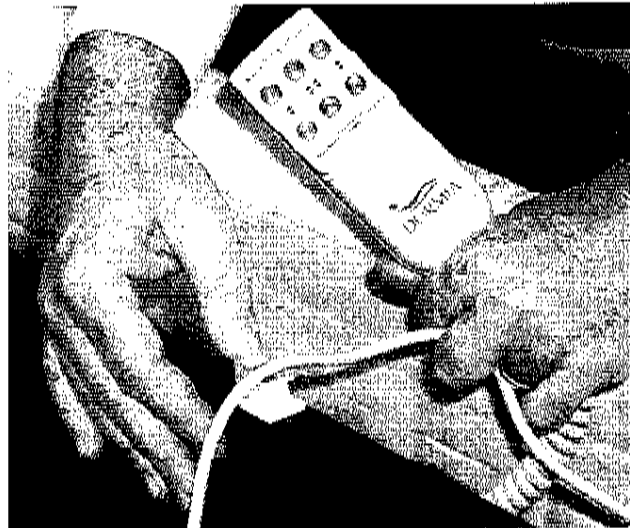

- F. Cut one side of the carton in the corners (or tear it) and raise the bed on the opposite side (This should be done by two people) and turn it over on to the casters (Figure E). Take care to lift in turning the bed so as to not place the weight of the bed on the side of the casters. Place the Washers on the four screws and attach the Mattress Retainer Bar to the foot end of the bed (as shown in Figure E). The Mattress retainer Bar must be used or the mattress will slide off the bed when the head end is raised.

Figure E



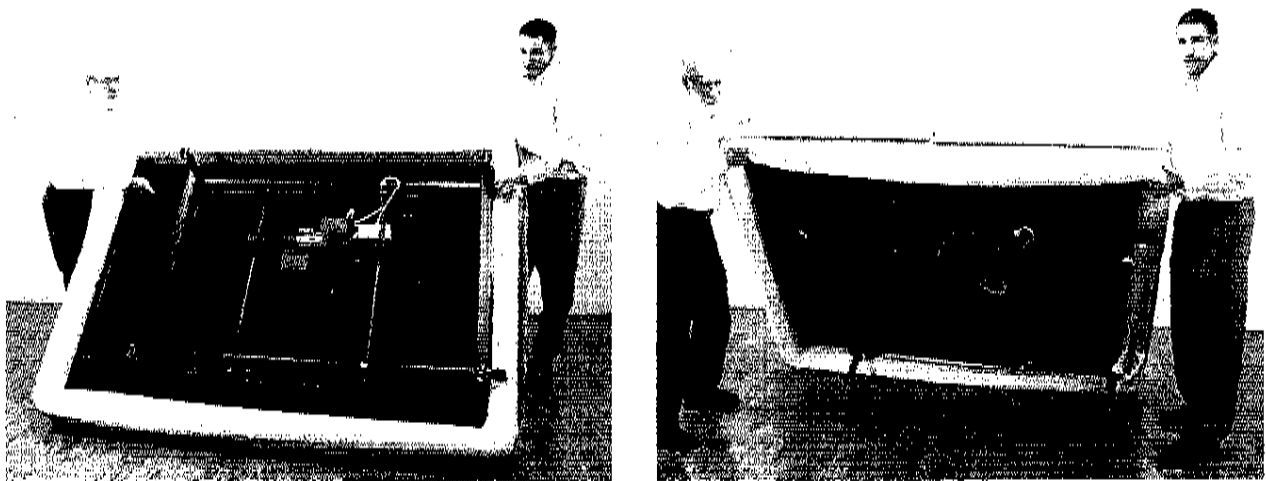


Figure E

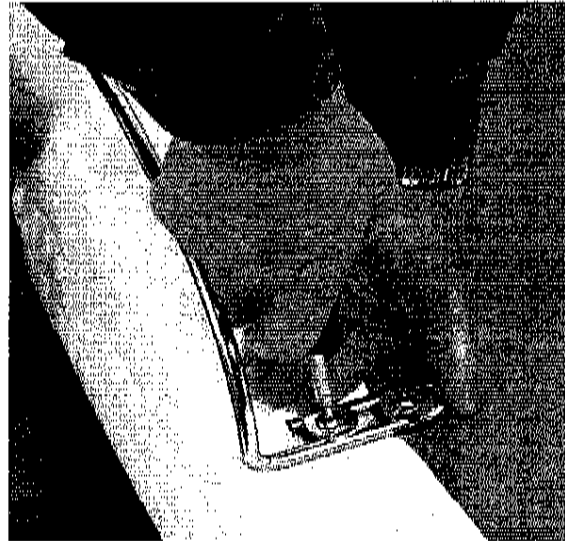

- **G. Unwrap your mattress and place it on the bed. You are now ready to attach the headboard. The distance between the front surface of the headboard and your mattress should not be greater than three (3") inches (see Figure F). This IMPORTANT as a larger space may allow arms or one's head to be caught between the headboard and the mattress. Securely tighten all nuts and bolts. Place your Imagination Adjustable Bed Base in the location where it will set. Plug the unit into a wall receptacle that is on at all times, or ideally a surge protector, and you are ready to enjoy the most relaxing rest you have ever experienced. Be sure to lock all four casters and place rubber caster cups under each caster.**

Figure F

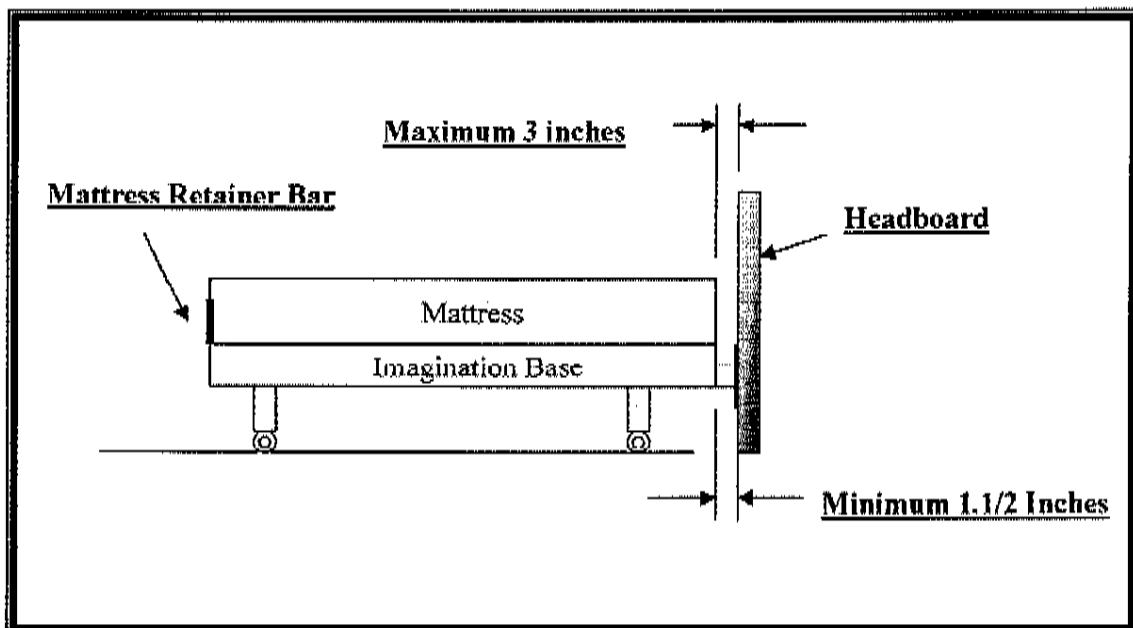

TROUBLE SHOOTING: Problems and solutions



Your Imagination Adjustable bed has been assembled by craftsman and carefully inspected prior to shipping. In spite of the care that is taken, we are dealing with an electro-mechanical device and there is always a possibility that something can go wrong. We hope that if you have a problem the answer will be found here, and that you enjoy many years of satisfaction with this product.

The Bed does not operate:

- Check to make sure the plug from the electric motor is firmly in the wall outlet
- Make sure there is power in the wall outlet by plugging in a lamp or radio,
- Make sure you are not plugged into a wall outlet that is controlled by a wall switch.
- Check that the hand control cord is plugged in firmly to the motor.
- Unplug the power cord from the wall outlet and carefully check it for any damage (If it does show signs of damage, do not plug it back in the outlet. Since it is affixed permanently to the motor you will have to contact Customer Service for further instructions)

If only certain functions do not work:

- Check that the hand control cord is plugged in firmly to the motor.
- Check the under side to make certain there are no obstructions, such as sheets, pillows, other bedding items, or objects sometimes stored under a bed


If the recommendations shown above do not resolve the problem, it is indicative of some situation which should be referred to our Customer Service Group. The call is Toll Free and we hope you will let us help you with the problem. **Call (877) 707 7533 and ask for Customer Service.** Thank you

NOISES:

The Imagination has been engineered to operate smoothly with a minimum of noise. Most noise that is obvious is the bottom of the mattress rubbing the decking of the base. If you should at any time hear an unusual noise while the bed is operating, cease the movement at once and check if anything is obstructing or interfering with the operation of the bed. Since the operating power is an electric motor, you will normally hear the motor as it raises or lowers the bed.


INSTRUCTIONS FOR USE

- **A. The controls are self explanatory. In operating your Imagination Adjustable Bed, keep the information provided in the section entitled Precautions and Safety Information in mind. By following those instructions, you will enjoy many years of satisfaction and safe operation.**
- **B. One safety and convenience feature that is important to note is the “Emergency Power Down” feature. In the event your home or area sustains a power loss, and the head end or the foot end of the unit or both are raised, you can easily place your bed into a flat position and safely exit the bed. To do this all that is necessary is to press and hold head & foot down button on your control. This will lower the bed to a flat position. The battery should be replaced after each occasion of such use. Never use the battery mode to raise either the head or foot; it is designed for down motion only,**

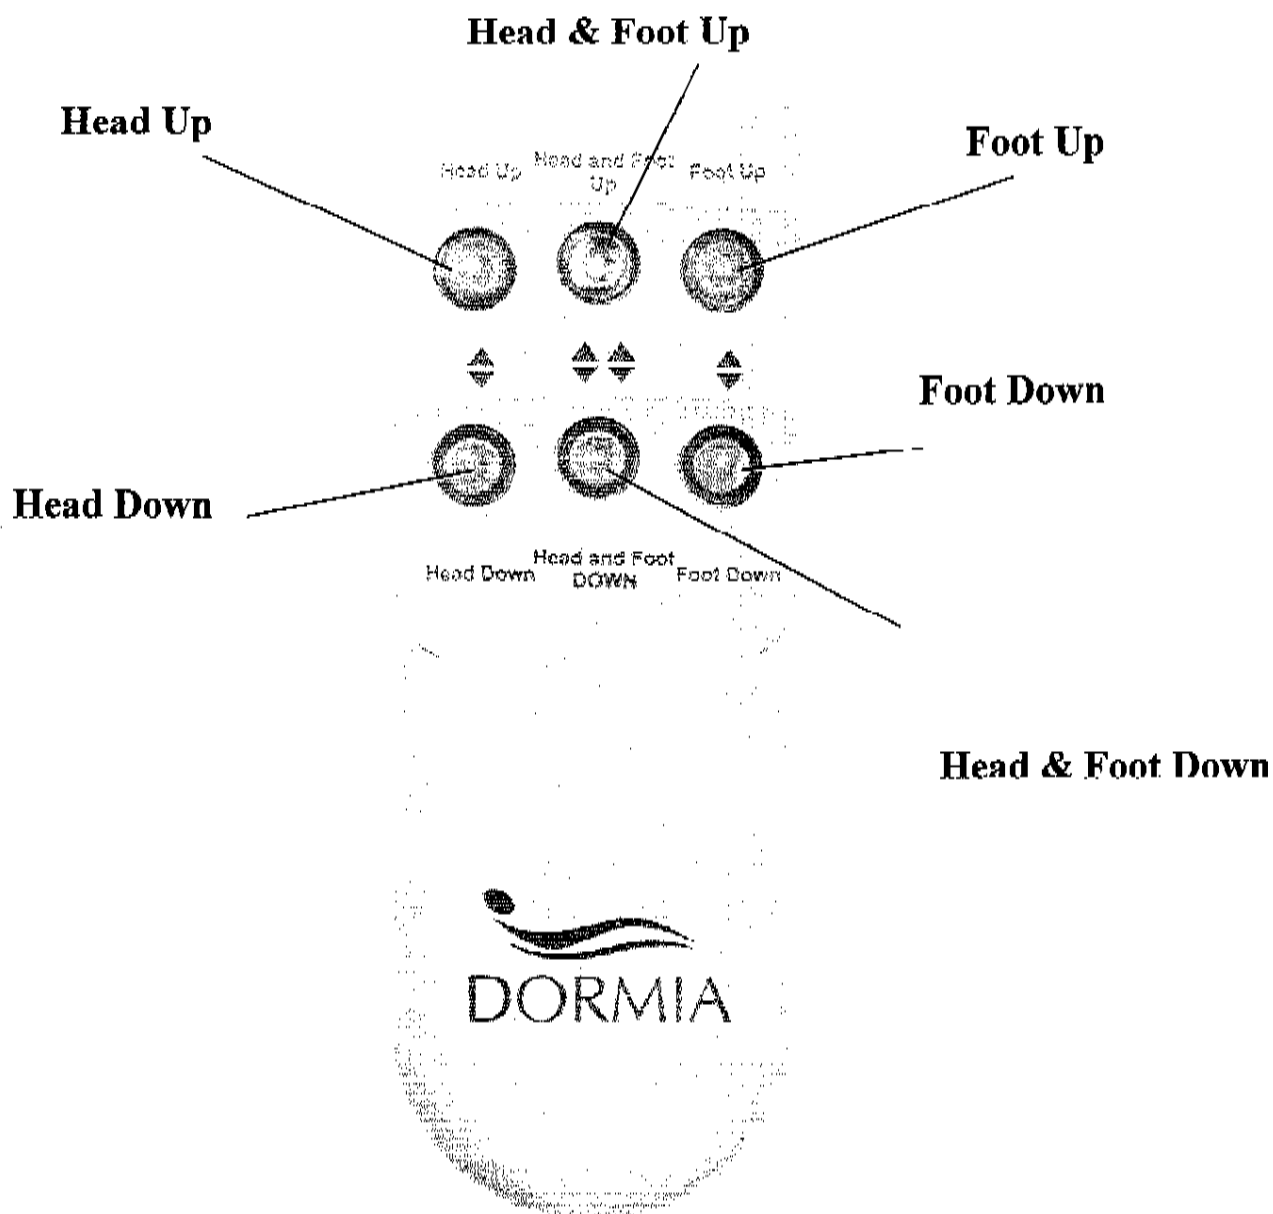

WARNING!!!

WHEEL ASSEMBLY INSTRUCTIONS

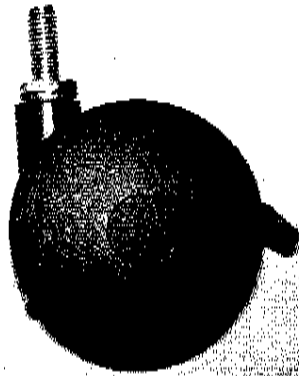


A


- A.** This is how the Wheel Assembly should look out of the package.
- B.** The Top of the Wheel Assembly
- C.** Unscrew the **Bolt** from the **Top** of the Wheel Assembly
- D.** The Wheel Assembly parts should look now like this
- E. VERY IMPORTANT!** The **Bolt** needs be screwed to the **Bottom** of the Wheel Assembly
- F.** Attach the **Top** of the Wheel Assembly to the **Bottom** of the Wheel Assembly with the **Bolt** *between the two pieces*.
- G.** The final wheel assembly should look like this.



B

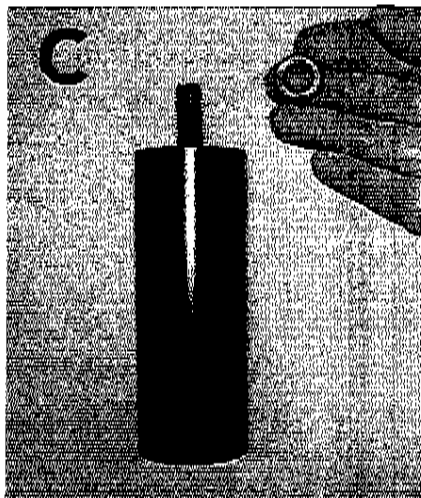


C

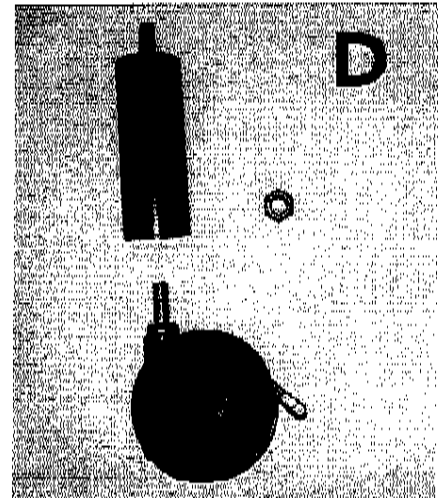


D



E

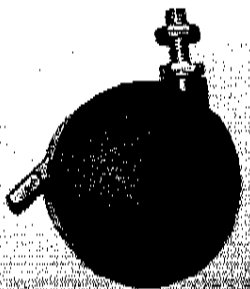

F

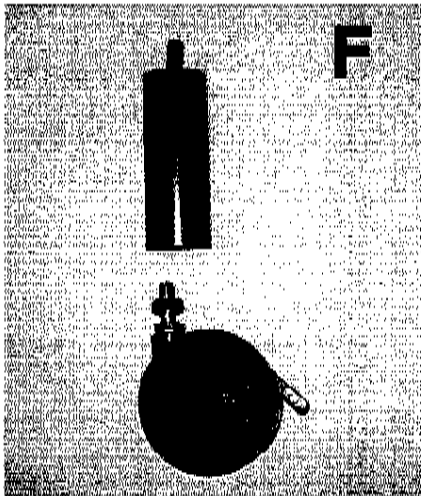

G



The Imagination Adjustable Bed 20 YEAR LIMITED Warranty

Your new Imagination Adjustable Bed is covered by several important warranties. Classic Sleep Products, Inc (CSP) makes the following warranty provisions to the original Purchaser of the bed, pursuant to the terms and conditions as detailed in the following: The starting date of this warranty shall begin on the date of purchase of a new and unused unit. If you purchase an Imagination unit that has been a "sales floor demo", the warranty shall commence from the date that the unit was manufactured.

FULL ONE YEAR WARRANTY

The Imagination is warranted to be free of defects in materials or workmanship for a period of one year from the starting date of the warranty as described above. Upon notification by the Purchaser, CSP will repair, or replace any defective part, including labor and any transportation cost required to correct the problem as authorized by CSP. In the event your Imagination is delivered with damage from the transport, the Purchaser should file claim with the delivering carrier.

LIMITED FIVE YEAR WARRANTY

From the second year through the fifth year from the warranty starting date, upon notification, CSP will replace any part of your Imagination Adjustable Bed that is determined to be defective. In order for the replacement part to be covered by this warranty, the defective part must be returned at the Purchaser's expense within 15 days from the receipt of the replacement. The Purchaser shall be responsible for all service and transportation costs involved with the replacement part.

LIMITED TWENTY YEAR WARRANTY

From the sixth through the twentieth year from the starting date of this warranty, CSP will, upon notification, repair or replace any Imagination part that is determined to be defective. The cost of such replacement part(s) shall be paid by the Purchaser who will pay 1/180th of the cost multiplied by the number of months since the beginning of the sixth year, and CSP will pay any the balance. In order to qualify under this provision, the Purchaser must return the defective part within fifteen (15) days after receipt of the replacement part. All costs for service and transportation related to the replacement shall be paid by the Purchaser. This warranty shall terminate at the expiration of the twentieth year from the starting date of the warranty, and any repairs, replacements, or service shall be entirely the responsibility of the Purchaser.

OTHER APPLICABLE TERMS AND CONDITIONS

The warranties described above shall not apply if: 1. The damage or malfunction is caused by the Purchaser thru abuse, misuse, electrical problems relating to power surges or "low voltage", or operation of the unit in any manner that is contrary to the instructions for operation and maintenance procedures described in the Owner's Manual. 2. There has been any repair, replacement or alteration of any part of the Imagination unit, that has been performed by an unauthorized person. 3. Any damage caused by mishandling or negligence by any carrier involved in transporting the unit. (Such claims for damage should be filed with the carrier) 4. The Purchaser requests in home service due to not following the instructions in the Owner's Manual or for "educational" purposes, or locating appropriate electrical connectivity. (In most case your Dealer will be most helpful in answering your questions.)

CSP shall not accept any liability for any costs or expenses which the Purchaser might incur that have not been specifically authorized and approved by CSP. In addition CSP assumes no liability for any damages to mattresses, bedding, electrical cords, etc, due to any malfunction or defect of the Imagination.

Any repairs or replacement of the Imagination or any parts thereof, shall not in any way extend the warranty period on either the entire unit or the individual replacement part(s). The original warranty period, as described above, shall prevail in all cases.

CSP at its' sole discretion and option shall make the decision to repair or replace any part of, or the entire Imagination unit as the warranty conditions outlined above are applied.

The only remedy of the Purchaser shall be repair or replacement. CSP shall not assume any liability for any special, indirect, incidental or consequential damages or for any other damage, claim or loss not expressly covered by the terms of this warranty. There shall be no reimbursement for loss of use, inconvenience, removal, set-up time, shipping costs., or any other expenses.

CSP makes no warranty other than as described and there are no terms, conditions warranties or understandings that are not completely described herein. CSP offers no other warranty whatever, specific or implied, and all implied warranties of salability and appropriateness for a particular purpose are disclaimed by CSP and shall not be considered under this agreement.

Some states do not allow or exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to every Purchaser.

This warranty give the Purchaser specific legal rights, and the Purchaser may also have other rights, which may vary from State to State. This warranty is valid in all 50 States and Puerto Rico.

All questions claims and correspondence should be directed to Classic Sleep Products, Inc., 8214 Wellmoor Ct., Jessup, Maryland 20794. Attn: Customer Service – Phone (877) 707-7533 Fax: (888) 637-1943